



TITAN EXPANDER BARRIER INSTALLATION GUIDE

The Titan barriers connect with Chapter 8 Titan barriers and expand to up 3.1 metres.



 
Place the barrier in desired position



Unhook the hinge.




This barrier attaches to another titan expander or titan barrier via the Flexiclip. Push the clip at the back of the Flexiclip and slot to attached barrier.





Equipment / Accessories Needed:

Flexiclips

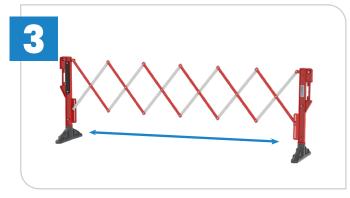

Take hold of the carry handle/barrier arm and extend the barrier to the required width.



