



EURO ROAD BARRIER INSTALLATION GUIDE

Our durable water filled Euro barriers are a simple but effective solution for re-routing traffic flow no matter the scene, situation or setting. Similar to the EVO barrier but taller and wider, the Euro barrier can be used either as a standalone product or in conjunction with both the Post and Rail/Mesh fence extensions.


People to Install:



Equipment / Accessories Needed:


No accessories or tools required.

1

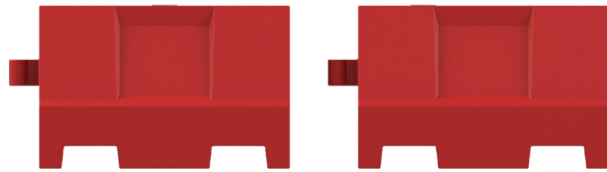

Place the barriers along the perimeter line you want to create. Make sure that they face the same direction. Ensure the ground is stable and the barriers are firmly positioned.

2

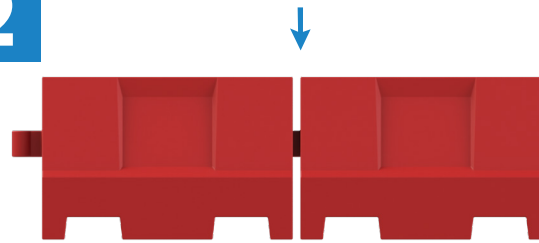


Lift the protruding connection point of the first barrier up and over the plastic loop on the end of the second barrier. Ensure the barriers are locked into place with the overlapping knuckle system.

3




The barriers should fit together snugly without any gaps. Repeat this process until you have the required number of barriers.

4

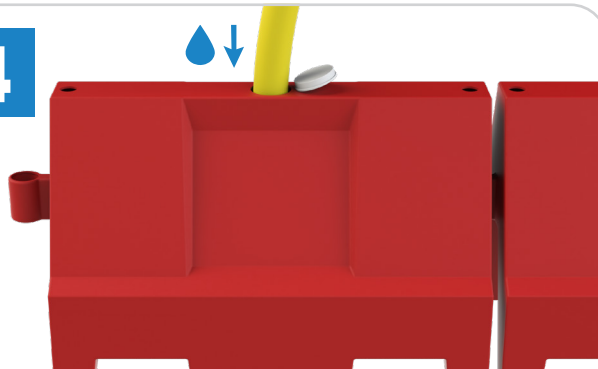

Once you are happy with your interlinking barrier line, it's time to put the water in. To do this, simply open the cap on top of the barrier and use a hose to fill with water. This will help to weigh the barrier down and keep it in place.

5

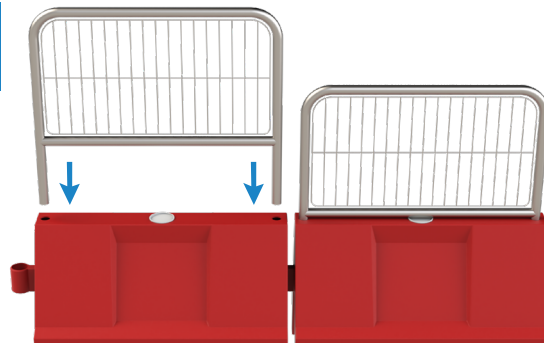

Slot the mesh fence panels, post and rail or reflect panels into the grooves at either end of the barrier. Simply repeat step 5 as many times as needed.



Useful Tip: To empty the barriers after use, tip it on its side and open the cap at the top to release the water and reverse step 4.



Wear the appropriate PPE for this task.