



## NOVUS BARRIER INSTALLATION GUIDE

Novus Barriers are water-filled separators which form a solid barrier between pedestrians and traffic when connected together.

People to Install:



Equipment / Accessories Needed:


- Standard coupler

1



Place the barriers along the perimeter line you are creating. All the barriers should face the same direction and be placed on level ground.

2

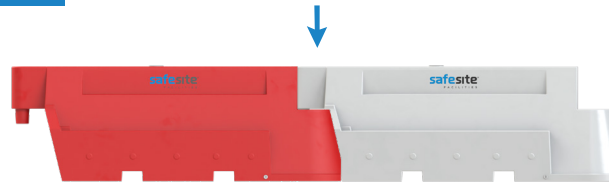


When the 1st barrier is in place, lift the end of the second and barrier lower it into the prong/socket.

3




Once you are happy with how the barriers have been linked and arranged, open the white cap on the top of the barrier and start to fill with water.

4

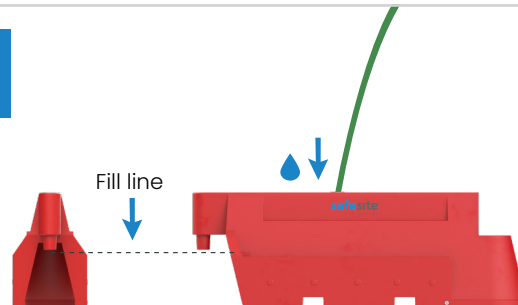


Fill water to the fill line as suggested.

5

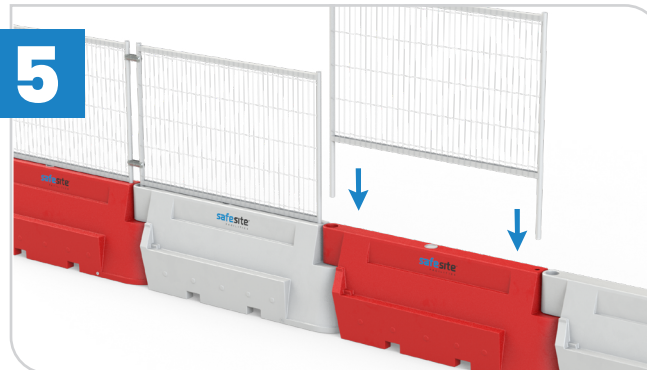

If adding fencing - slot the mesh fence or hoarding panels into the holes at either end of each of the barriers.

6

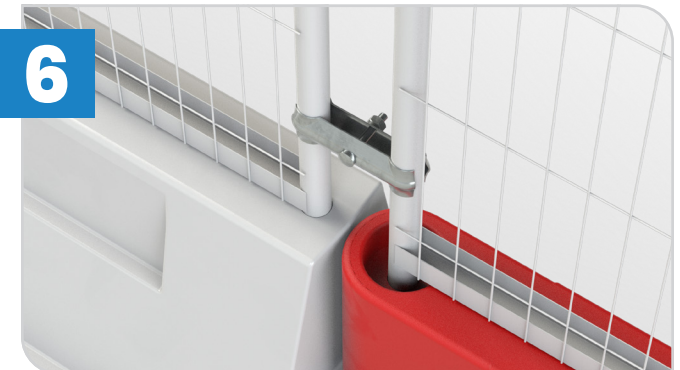

To secure the panels in place, position a coupler between the mesh fence panels and tighten.

