



SLOT BLOCK BARRIER INSTALLATION GUIDE

The Slot Block water-filled barrier is ideal for many different situations where temporary fencing is required. This could be for emergency maintenance, repair or road works.


People to Install:



Equipment / Accessories Needed:

- x2 Couplers

1

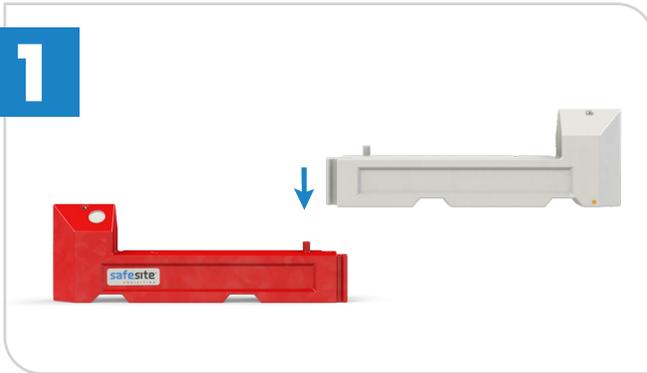

First, make sure the ground is ready for deployment of the barriers.

2



Ensure the two sections of the barrier are locked firmly together using the interlocking system in the middle of the barrier. To do this, simply push the two base units together and clip in.

3



To attach the mesh fence panel, slide the legs of the mesh fence into the slots at either end of the barrier and make sure it's secure.

4



Use a coupler at the top and bottom section of the panel to secure in place.

5



To fill with water, open the filler cap on the end of the barrier and pour in.

6



Remember to empty the water after use. Simply release the drainage plug, and gently tilt the barrier to ensure all the water has come out.



Useful Tip: The barriers are designed to stack easily. The blocks top and tail to stack neatly on top of one another for storage and delivery.



Wear the appropriate PPE for this task.